



# Paddle Board Use and Storage

## Usage

1. Make sure you have read and understood the [Terms of Hire for ESC boats, Sups or Kayaks](#), **particularly the restrictions of use.**
2. Locate the Key from the key safe in the outer office. **Always return** the keys after use.
3. The boards can be found in the store cupboard at the end of the sail store. Please take notice of how they have been stored as you will need to replicate this. Pretty much everything in this store cupboard is sharp and these boards are inflatable so particular care needs to be taken when moving the boards.
4. Attach the removable Skeg. The skeg is stored in the carrying handle on topside of the board. To attach it, slide the skeg into the box on the underside of the board. Then locate the locking pin. Once in place **DO NOT STAND** the Board on the Skeg. Flip it over.
5. Ensure there is deep enough water to launch and stand on the board.
6. Always wear the leash.

## Storage

1. Remove the skeg and store in carrying handle.
2. Attached leash to carrying handle to stop in dragging on the floor.
3. Please hose down the board after use and re-coil the hose when finished.
4. Return to board to the cupboard. Always stand board with the bow UP.
5. Please lock the boards as you found them. There is a D ring on the stern of the board.
6. Store the paddle next to the board.
7. Return the key to Key Safe.
8. Tell your friends how great that was.
9. Rebook 😊